


INSTALLATION

DRAINAGE OPTIONS

Your new tumble dryer is fitted with an internal drain pump, which gives you the option of being able to drain condensed water to its water bottle, or to your household waste pipe. Connecting your dryer to a household waste pipe will mean you will not need to periodically empty the water bottle. As supplied, the drier will drain the water to its bottle. If you wish to convert the dryer so that its water is diverted to a household waste pipe, follow the simple instructions below:-

- 1/ Pull the drain hose from the valve at the top of the unit.
- 2/ Fit the drain hose into your household waste pipe, ensuring a gap between the end of the hose and any water in the waste pipe.

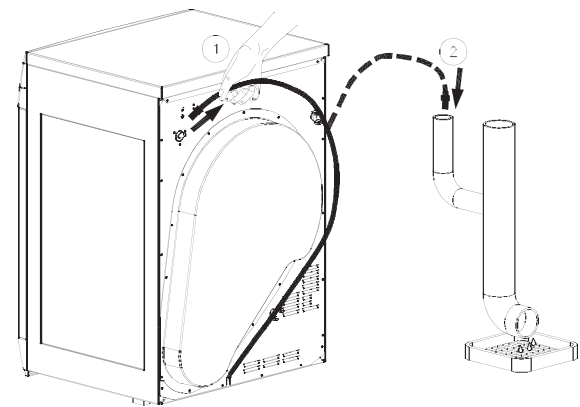


To return your drier back to taking the condensed water to the water bottle, simply fit the drain hose back to the valve at the top of your drier.

If the drain hose is not long enough to reach your waste pipe, a drain extension kit can be obtained from your retailer (part number 4213 089 8778).

The illustration shows the minimum space required by the dryer and the position of the waste-pipe within this space and behind the dryer. If a trap is fitted it must not obstruct the air inlet at the back of the dryer.

The waste pipe can be positioned on either side of the dryer. If the waste pipe is used by both the dryer and a washing machine then its diameter must be large enough to contain both hoses - 1.5" bore (38mm) minimum.

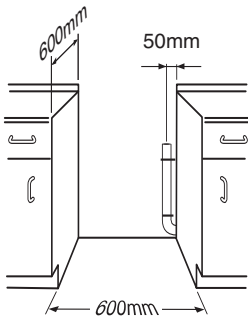


FINAL INSTALLATION

Push the filter into its operating position as shown in the diagram.

If you wish to change the side on which your door opens, see the instructions on the back page.

Remove any dust by wiping the drum and door with a damp cloth. Any initial smell from the heater should disappear after the first period of heating.

Position the tumble dryer so that the plug remains accessible after installation. Do not block the vent at the front of the dryer, as this will impair the working of the machine

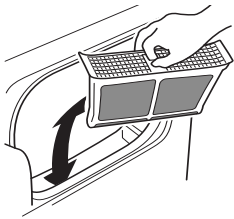

OPERATION

Open the door.

Load clothes loosely into the drum.

Load sheets first, starting with one corner.

Close the door.

Dry your hands.

Check that the timer is in the '0' position.

Plug in the machine.

Select correct heat position (see programme chart on control panel for recommendations).

Set the timer to the required time setting (see programme chart on control panel for recommendations). Then press the start button.

The drum will begin rotating. Reversing drum models will stop every few minutes to rotate in the reverse direction for a short time.

Should the clothes become dry before the cycle has finished, or if an excessive programme time has been selected, the drum will continue to rotate while the thermostat will automatically switch the heater off to prevent over-drying and save energy.

If the door is opened during a cycle the dryer will stop. To restart, close the door and press the start button. When drying large items such as sheets, we suggest you periodically stop the dryer to redistribute the load.


There is an automatic 12 minute cool down period at the end of every cycle, during which the heater is switched off. This helps to minimise creasing.

NEVER SWITCH THE DRYER OFF AND LEAVE A HOT LOAD IN THE DRUM.

AFTER REMOVING THE DRIED CLOTHES:


ALWAYS CLEAN THE FILTER.

Failure to do so could cause the safety cut-out to operate.

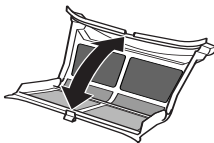


- Pull the filter upwards and away from the appliance.
- Remove any threads or fluff by hand or with a soft brush.
- Slide the filter back.
- Wash the filter occasionally in detergent solution using a soft brush to remove small particles.

ALWAYS EMPTY THE WATER BOTTLE

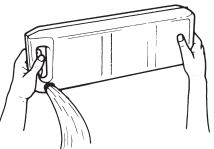

- Open the door, pull out and empty the bottle.
- Replace the bottle ensuring that it is pushed all the way in - if it is not, the dryer will not operate.
- If the dryer is connected to a drain there is no need to empty the bottle but it must be correctly fitted to the machine.

THE CONTROLS

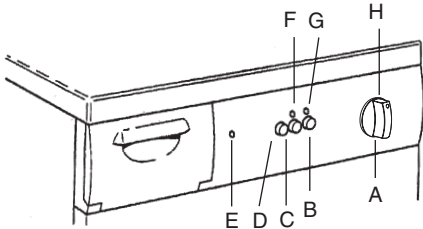

A. THE TIMER

Select the required dryer time based on the recommendations on the control panel.

B. ANTICREASE

If selected, this will minimize creasing by periodically rotating the drum after the drying cycle has finished.

C. HEAT SWITCH

Select the required heat setting based on the recommendations on the control panel.

D. START BUTTON

Press Start button after selecting the required drying time.

E. BOTTLE FULL NEON

This will light when the bottle needs emptying or when it is incorrectly inserted.

F. FULL HEAT SELECT LIGHT

G. ANTI CREASE SELECT LIGHT

H. DRYER ON LIGHT

Lights will not illuminate until the timer has been set and the start button pressed.

PREPARATION

Check care labels inside the garments.

CARE LABELS YOU MAY FIND ON YOUR FABRICS

	Suitable for tumble drying
	Tumble dry using full heat
	Tumble dry using half heat
	Do not tumble dry

Do not tumble dry woollen or wool mixture articles unless the article is labelled to be suitable due to a possibility of shrinkage.

Roll dripping wet articles in a towel to remove excess water.

Place delicate articles e.g. tights, scarves, inside a pillowcase.

To avoid the need to iron easycare polyester/cotton items it is better to only dry small loads (i.e half fill drum).

It is better to dry small and large articles together.

We suggest a fabric conditioner to be used to reduce static electricity.

Do not overload the dryer or dry large bulky items such as duvets or sleeping bags as it is important that the airflow through the dryer is not obstructed.

Do not place items contaminated with inflammable substances in the dryer, such as petrol, cleaning solvents, cooking oil, fat, or hair lacquer. These can cause fires. For the same reason, do not dry rubber, foam rubber, plastic or paper.

ADDITIONAL INFORMATION

ANY PROBLEMS

If the clothes are **not dry** after normal drying time:

- Check that you used the correct heat setting.
- Check that you have not set the timer within a cool down period.
- Check that the lint filter has been cleaned. A blocked filter will restrict the airflow.
- Check that the condenser unit and associated duct work are clean. If blocked these will restrict the airflow.
- Check that your dryer is heating - below the door to the left side, should feel warm to the touch after the first 10-15 minutes of its programme. Failure to heat may indicate the safety cut-out has operated. To reset, simply press the red button at the rear of the machine. If it has operated then a sharp "click" will be heard. This cut-out only operates if the airflow is severely restricted so make sure the filter is clean and that all other restrictions are removed before re-starting. If the cut-out continues to operate after checking the above points, you should contact your service agent.
- Check that the machine has the correct weight load in the drum before starting the appliance.

If your machine **does not work** check the following before calling a service engineer:

- Check that there is a supply of electricity.
- Check that the door has been properly closed and the machine is switched on.
- Check that the water bottle has been withdrawn from, and replaced into the machine.
- Check the plug internal connections.

TECHNICAL DATA

OVERALL DIMENSIONS:

Height: 85 cm

Width: 59.5 cm

Depth: 58 cm

MAXIMUM DRY WEIGHT LOADS:

Cotton 6kg

(for minimum creasing 2kg)

Delicates 2kg

For electrical ratings see plate on back of dryer.

For Model No. see serial plate inside door *(needed when requesting service).*

Room temperature range 5°C to 30°C.

Your washing machine should have a spin speed of not less than 800rpm.

IMPORTANT USER INFORMATION

These notes are provided in the interest of safety. You must read them before installing or using the appliance.

- This tumble dryer is intended for **NORMAL DOMESTIC USE ONLY**.
- Please note it is not recommended that the dryer is placed directly next to ovens or cookers as the performance of the dryer may be affected.
- A carpet must not obstruct the ventilation openings in the base of the dryer.
- Do not stack the tumble dryer on top of other appliances without the correct stacking kit.
- Any electrical work required to install the appliance should be carried out by a qualified person.
- It is important to clean the lint filter after each drying cycle and the condenser every three or four months or the restrictions to airflow will extend drying times and could cause the safety cut-out to trip.
- Under no circumstances should anything other than the recommended articles be placed in the tumble dryer.
- The tumble dryer should be serviced by an appointed service organisation and only genuine parts used.
- It is dangerous to alter or modify the product in any way other than fitting authorised accessories.
- We recommend that the appliance is unplugged each time after use. It should always be disconnected from the electricity supply if it is to be left unattended for long periods (i.e. weekends, holidays etc.)
- The rear of the dryer gets quite hot during use. Position the dryer so that the back is not accessible while in operation.
- It is important to clean fluff from the window of the dryer and around the door seal after each drying cycle. Failure to do so could result in water leaking.
- **DO NOT** use a two-way adaptor, or extension lead. The dryer must be connected to its own socket.
- **DO NOT** block the air inlets at the front and back of your dryer.
- **DO NOT** allow fluff to accumulate around the tumble dryer.
- **DO NOT** exceed the recommended maximum load.
- **DO NOT** allow children to tamper with the controls and keep them away from the dryer when it is in operation.
- **DO NOT** place articles in the dryer if anything other than a water solution has been used in the cleaning process.
- **DO NOT** attempt to dry dripping wet articles or items containing foam rubber or rubber-like materials.
- **DO NOT** use the tumble dryer if you suspect that it is damaged in any way. Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause serious injury. Consult your local appointed service engineer and insist on genuine spare parts. If the mains cord is damaged it must be replaced by a special cord available from the manufacturer or its service agent

THIS APPLIANCE MUST BE EARTHED



This label, positioned on the rear of your dryer, indicates the surface is hot when in operation - avoid touching

THE CONDENSER

The condenser and ducting should be cleaned 3 or 4 times a year or more frequently if the dryer is in constant use. See “CLEANING THE CONDENSER” opposite.

NOTE: The condenser will discolour through use.

REMOVING THE CONDENSER

- Firmly pull the condenser out.


RE-INSTALLING THE CONDENSER

- Carefully push the condenser back into the machine, until it is pushed fully home and a “click” is heard.
- Ensure all lint and fluff is removed from around the grille seal before closing or water may leak.
- IMPORTANT: The dryer may leak if the condenser is not correctly re-installed.

CLEANING THE CONDENSER

CAUTION: For maximum efficiency, the plates are made from very thin aluminium and are easily damaged. Do not try to poke anything between the plates or use a hard object or tool for cleaning. At all times, handle the condenser carefully and avoid crushing the plates.


- Remove the condenser (see opposite).
- Flush the fluff from between the plates under running water and carefully shake off excess water.

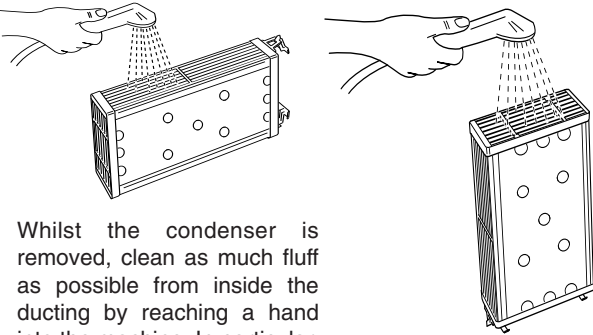

- Whilst the condenser is removed, clean as much fluff as possible from inside the ducting by reaching a hand into the machine. In particular, keep the passage from the fan clear (on the right hand side of the condenser duct).
- After cleaning, re-install the condenser (see opposite).

INSTRUCTIONS FOR USE


KENWOOD

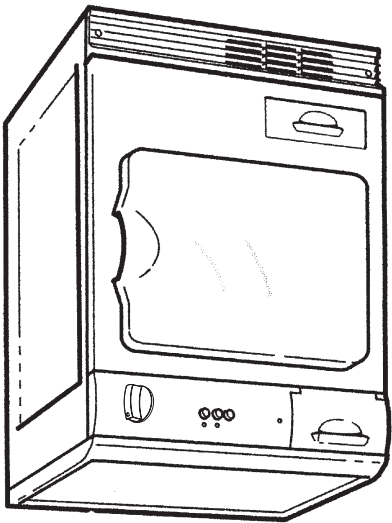

IMPORTANT: PLEASE READ THESE INSTRUCTIONS THOROUGHLY BEFORE USING THIS APPLIANCE. KEEP THEM IN A SAFE PLACE FOR FUTURE REFERENCE.

GB

REVERSING THE DOOR OPENING

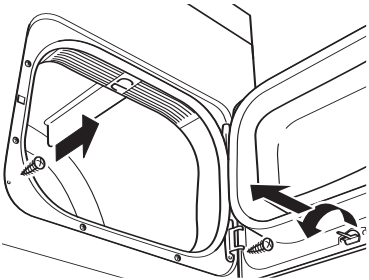

Large Door Opening :-

First remove the child safety peg from the top of the door by rotating 90° anticlockwise. Now unscrew the door hinges from the machine by removing the 4 screws. Do not use a power screwdriver as this may damage the screw threads. Remove the four screws from the opposite side of the door opening. Place these screws in the hinge holes on the other side of the door opening. Reverse the door and re apply the hinge screws. Replace the child safe peg in the top of the, now reversed, door. If you have a query about the product please contact our Currys product support line (08701) 565550

DSG Retail Ltd. is responsible for after sales service and any claims in respect of this licensed product. If you have a query about the product please contact our Currys product support line (08701) 565550